

**NOYES®**

## TRM Test Results Management Software Installation Instructions

### System Requirements

To use TRM application, you need the following hardware and software:

- A PC with a 1GHz (or faster) processor and an 800 x 600 (or larger) display
- A CD or DVD drive if installing from CD
- At least 1 GB of RAM
- A Windows compatible pointing device (mouse, trackball, etc.)
- MS Windows XP, Vista, Windows 7 (32-bit and 64-bit)

### Installing TRM

You can install TRM from the supplied CD-ROM, or you can download it from our web site at [www.AFLglobal.com/go/Software](http://www.AFLglobal.com/go/Software).

Follow the steps below to install the TRM software.

#### To install from the application CD-ROM:

1. Start Windows. If Windows is running, quit all applications.
2. Insert the TRM CD into the CD-ROM drive. (Note: normally the D: drive.)
3. The Installer will display the [Welcome] screen.

If the Installer does not start automatically, from Windows do one of the following:

- Click on the [Start] button and select the [Run] command from the pop-up menu.
- The [Run] dialog box appears. On the [Open] command line, type [D:\setup.exe].
- Click on the [OK] button to start.

OR

- Double-click the My Computer icon on the desktop to open the My computer folder.
- Double-click the CD-ROM icon.
- Double-click [Setup] or [Setup.exe]

4. When the Installer [Welcome] screen is displayed, click on the [Next] button to continue.
5. Follow the on-screen instructions.
6. When the Installer displays the [Complete] screen, click on the [Finish] button.

#### To download from the web:

1. From the [www.AFLglobal.com/go/Software](http://www.AFLglobal.com/go/Software) select the TRM Software and click on the download link.
2. Follow the on-screen instructions. The software will download to your computer's hard drive.
3. Once downloaded, double-click on the [TRM] or [TRM.exe] file.
4. When the Installer [Welcome] screen is displayed, click on the [Next] button to continue.
5. Follow the on-screen instructions.
6. When the Installer displays the [Complete] screen, click on the [Finish] button.