


Changing The Wind Cover Auto Close Feature

(see the User Manual for more detailed information)


From the READY screen press the MENU button

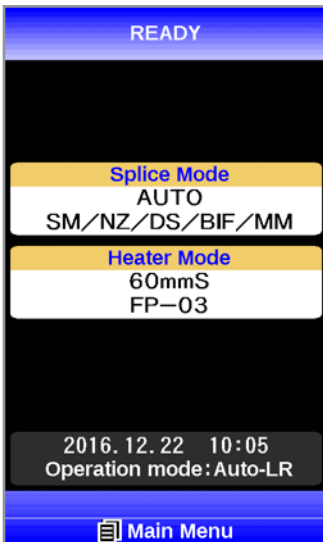

From the SPLICE MENU screen use the UP/DOWN button to highlight Splice Settings. Then press the ENTER button.



button to highlight Splice Settings.

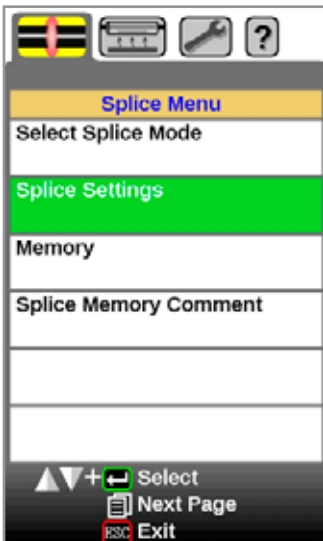


From the SPLICE SETTINGS screen use the UP/DOWN button to highlight Operation Mode. Then press the ENTER button




button to highlight Operation Mode

Changing The Wind Cover Auto Close Feature

(see the User Manual for more detailed information)

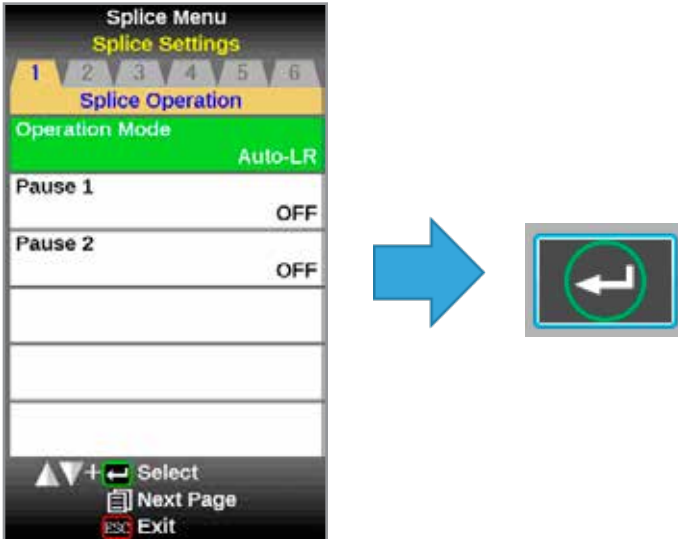

The Operation Mode sub-menu should appear with multiple options.

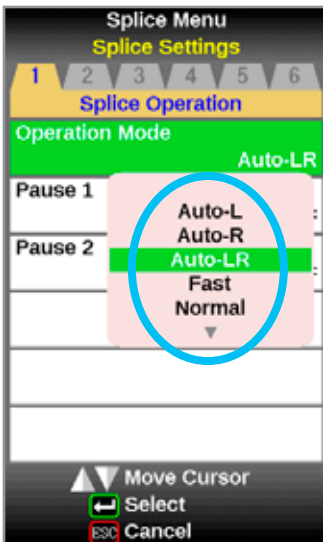

Use the UP/DOWN button



to highlight the mode (see table of options below) that you want to be in effect

Press the ENTER



button to confirm your choice.

Changing The Wind Cover Auto Close Feature

(see the User Manual for more detailed information)


Parameter	Description
Operation Mode	
Auto-L	Proof test, wind-protector opening, and sheath clamp opening are automatically performed after the end of splicing.
Auto-R	There is the mode of the left, the right, and right and left according to the patulous state of a sheath clamp.
Auto-LR	There is the mode of the left, the right, and right and left according to the patulous state of a sheath clamp.
Fast	Wind-Protector opening and a proof test are simultaneously done after the end of connection. Perform sheath clamp opening manually.
Normal	If the SET key is pressed after the end of splice, wind-protector opening and a proof test will be carried out. Perform sheath clamp opening manually.
Norm-L	If the SET key is pressed after the end of splice, wind-protector opens and a proof test will be carried out.
Norm-R	There is a mode for the left, the right, and right and left according to the previous state of a sheath clamp.
Norm-LR	There is a mode for the left, the right, and right and left according to the previous state of a sheath clamp.
Manual	All the parameters in custom-made mode are in the state of OFF.
Customized	Operation Mode
	Sheath Clamp Auto Release
	Setup of the "left", the "right", "right and left", and "OFF" can be performed.
	Auto Start Trigger
	Select of the "OFF", the "Fiber Set", "Cover Close", and "OFF" can be performed.
	Cover Close Reaction Time
	Time from setting fibers in the splicer until closing wind-protector can be set up.
	Wind-Protector Motion(At the time of Customized was selected)
	Power On
	Setup of wind-protector motion at the time of power on "open" or "close".
	Reset
	Setup of wind-protector motion at the time of Reset is pressed "open" or "close".
Finish	
Setup of wind-protector motion after the end of splicing "open" or "close".	
Error	
Setup of wind-protector motion at the time of error "open" or "close".	


From the READY screen press the MENU button



Changing The Wind Cover Auto Close Feature

(see the User Manual for more detailed information)

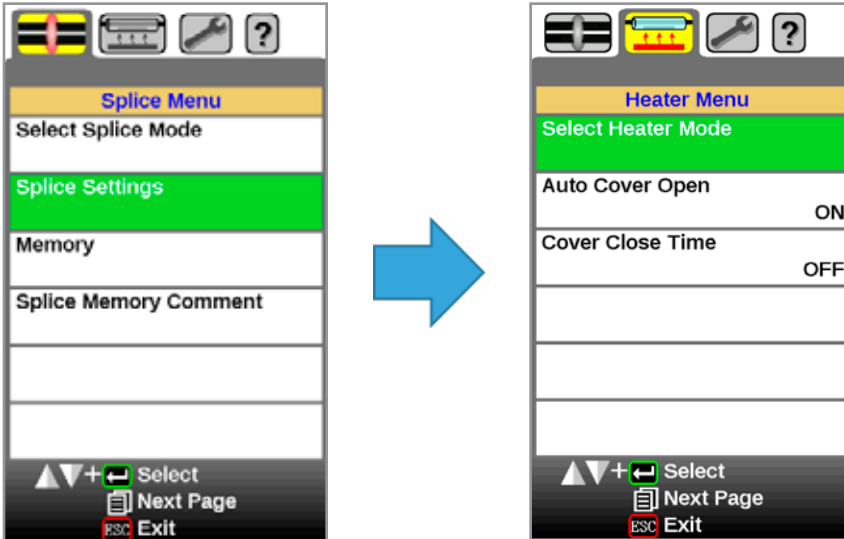

Use the UP/DOWN button  to highlight the Auto Cover Open and press the ENTER button to CHANGE the setting from ON (default) to OFF. Pressing ENTER a second time will turn the setting from OFF to ON.

