



## Distribution Tie with Pad

**NOTE: READ AND UNDERSTAND INSTALLATION INSTRUCTIONS BEFORE INSTALL. ENSURE YOU HAVE THE CORRECT HELIFORMED PRODUCT BEFORE INSTALL IS STARTED.**





### Cold Application

1. Apply the Tie Pad to conductor so the conductor does not come into direct contact with the insulator.
3. Rotate the Distribution Tie counter clockwise ensuring both legs cross under the conductor.

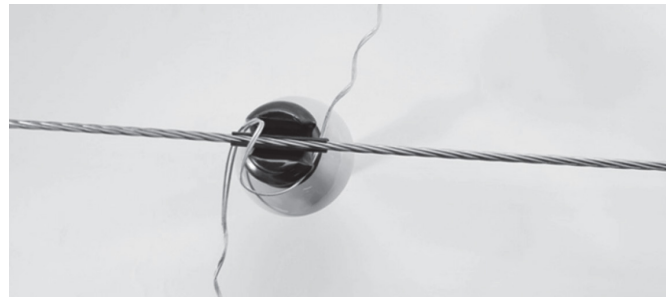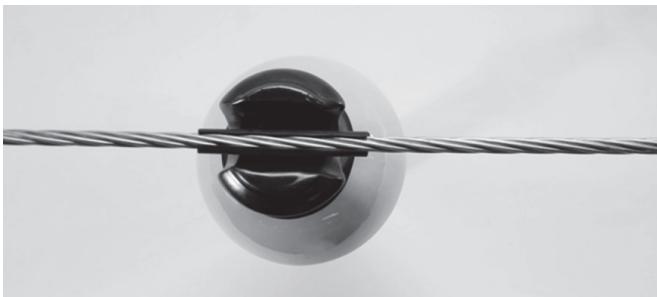

2. Install Distribution Tie onto insulator so both legs are parallel to the conductor.
4. Continue rotating the legs until the distribution tie fully seats itself.

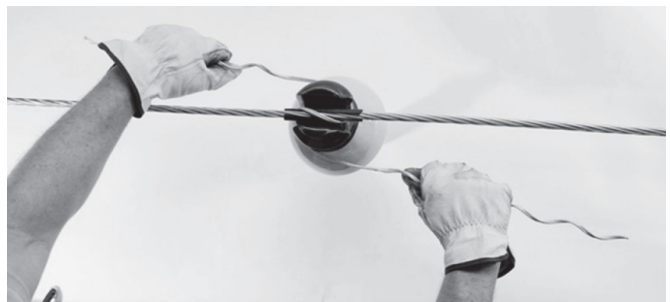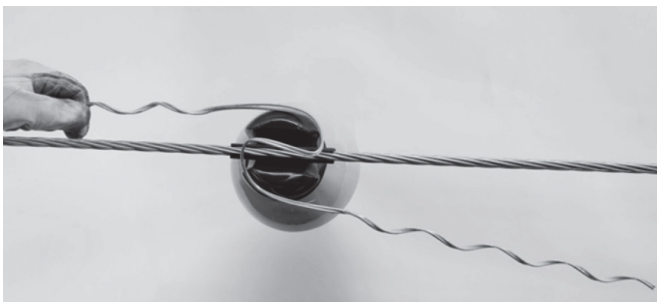

*continued >*

### Distribution Tie with Pad

5. Wrap one leg of the Distribution Tie. Ensure the Distribution Tie end fully snaps into place. This may require more pressure than the previous wrap.



6. Repeat step 5 for the other Distribution Tie leg.



7. Completed installation should appear like below.



### Safety

1. Distribution Ties are precision devices. They should be stored in covered cartons and handled carefully.
2. This application procedure is NOT intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. Failure to follow these procedures and restrictions may result in personal injury.
3. For proper performance and personal safety ensure the proper size Distribution Tie has been selected before installation.