


Double-Support Tie with Pad

NOTE: READ AND UNDERSTAND INSTALLATION INSTRUCTIONS BEFORE INSTALL. ENSURE YOU HAVE THE CORRECT HELIFORMED PRODUCT BEFORE INSTALL IS STARTED.

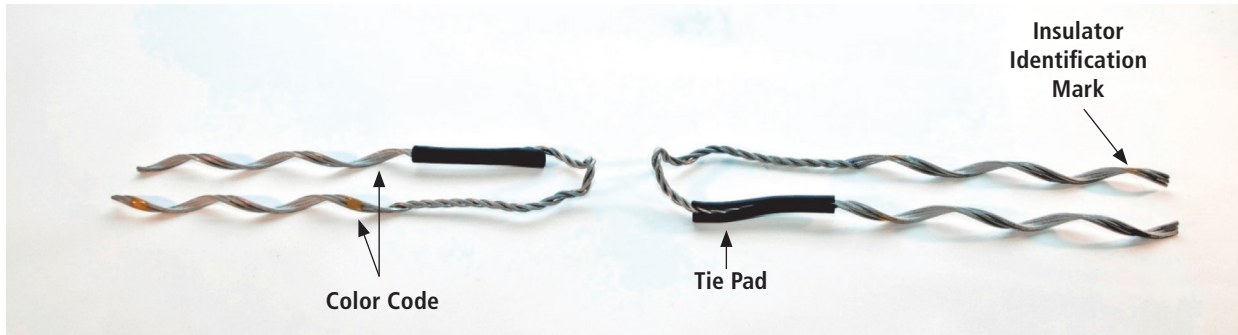

Cold Application

1. Apply the tie pads to the conductor so the conductor does not come into direct contact with the insulators.
3. Lift one Tie leg up and over the conductor and let it naturally start to wrap the conductor wire followed by the other Tie leg. Both Tie legs should cross and meet at the crossover mark which is marked.



2. Install the Double-Support Tie over the pad so the Tie ends extend away from the insulator. Ensure the conductor and insulator neck are between the Tie legs and both Tie legs properly seat in the groove of the insulator neck.



continued >

Double-Support Tie with Pad

4. After Matching crossover marks, continue wrapping both legs until they are completely wrapped. Snap the end of each leg into place. Ensure the Support Tie end fully snaps into place. This may require more pressure than the pressure to wrap.



5. One side is now complete. Repeat the above steps to the other side with the second tie.



Safety

1. Double-Support Ties are precision devices. They should be stored in covered cartons and handled carefully.
2. This application procedure is NOT intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. Failure to follow these procedures and restrictions may result in personal injury.
3. For proper performance and personal safety ensure the proper size Double-Support Tie has been selected before installation.