

CS260-10
Contractor Series
Live PON OTDR
User Guide

Table of Contents

Safety Information	4
General Information	5
Contacting Customer Service	5
Recommended Accessories	5
CS260-10 Hardware Features	6
Front Panel (Keys and Display)	6
Top Panel (Test Ports)	7
Side Panel (USB and Power Ports)	7
Front Panel Keys	8
CS260-10 Models	9
CS260-10 Setup	9
OTDR Modes	9
Light Source and Power Meter Mode	9
Main Menu	10
Selecting a Test Mode	10
Understanding OTDR Test Parameters	11
Setting Test Parameters	11
FTTx – In Service Test Mode Settings (CS260-10-103 only)	13
FTTx - PON Construction Test Mode Settings	14
Full Auto Test Mode Settings	14
Real Time Test Mode Settings	15
Expert Test Mode Settings	15
Event Thresholds: FTTx – In Service mode	16
Event Thresholds: FTTx – PON Construction mode	16
Event Thresholds: Full Auto mode	17
Event Thresholds: Expert mode	17
Fiber Menu Settings	18
Cables Menu Settings	19
General Settings	19
Light Source and Power Meter Settings	20
Trace Page Features	22
Event Table Page Features	23
Summary Page Features	24
Information Page Features	24
Running OTDR Tests and Viewing Results	25
To Start a Test	25
Test Viewer Pages Description	25



Table of Contents

Saving and Reviewing Test Results	26
File Manager System	26
File Manager – Jobs Page.....	26
File Manager – Cables Page	27
File Manager – Results Page	28
File Manager – Save As Page	29
Creating New Cables (folders) Using the Save As Page	30
Selecting a Cable as the Current Cable (folder)	30
Saving Test Results.....	30
Opening Files (Reviewing Saved Results)	30
Deleting Jobs/Cables/Results	31
Transferring Files to a PC via USB	31
Maintenance Tips	31
Dust Caps	31
Clean Test Cables and Fiber-under-Test (FUT)	32
Clean Optical Ports	32
Recharging Batteries	33
Repair and Calibration.....	33
Prepaid Calibration Plans	33
How to View Version Information	34
Warranty	34

Safety Information



WARNING! Use of procedures or adjustments other than those specified herein may result in hazardous radiation exposure.

1625 nm OTDR port	<p>This is a CLASS I LASER output</p> 
VFL port	<p>This is a CLASS II LASER output. Do not stare into beam</p> 



WARNING! Use only the specified AC adapter. Use of another type of AC adapter can damage the instrument and create the danger of fire and electrical shock.



WARNING! To avoid the danger of fire and electrical shock:

- Never use a voltage that is different from that for which the AC adapter is rated.
- Do not plug the unit into a power outlet that is shared by other devices.
- Never modify the power cord or excessively bend, twist, or pull it.
- Do not allow the power cord to become damaged. Do not place heavy objects on the power cord or expose it to heat.
- Never touch the AC adapter while your hands are wet.
- Should the power cord become seriously damaged (internal wiring exposed or shorted), contact the manufacturer to request servicing.



CAUTION! Do not run any tests or perform functions that activate an CS260-10 laser unless fiber is attached to the corresponding OTDR port.



CAUTION! To avoid serious eye injury, never look directly into the optical outputs of fiber optic network equipment, test equipment, patch cords, or test jumpers. Refer to your company's safety procedures when working with optical systems.

NOTICE: A CS260-10 contains no user serviceable parts. Except for changing batteries and cleaning optical ports, this instrument must be returned to NOYES or authorized agents for repair and calibration.

IMPORTANT: Proper care in handling should be taken when using any precision optical test equipment. Scratched or contaminated optical connectors can impact the performance of the instrument. It is important to keep the dust caps in place when the unit is not being used.

General Information

This user's guide provides operating instructions for testing fiber optic networks with the CS260-10 Contractor Series OTDR and assumes that you have basic knowledge about testing fiber optic networks. The purpose of this user's guide is to explain how to use and maintain your CS260-10 Contractor Series OTDR. Please check our web site at www.AFLglobal.com, NOYES Test and Inspection for updates to this manual, software updates, and additional application information. If you have any questions about your CS260-10 and recommended accessories, or if you need technical or sales support, please contact NOYES Customer Service.

Contacting Customer Service

You may call NOYES Customer Service between 8 AM and 5 PM, United States Eastern Time.

Phone 800-321-5298

603-528-7780

Fax 603-528-2025

Mail: NOYESTechSupport@AFLglobal.com

Recommended Accessories

Fiber optic test jumpers are required to connect an CS260-10 to the fiber under test. Test jumpers must have the same core and cladding size as the fiber under test. The connector at one end of the test cable must mate with the appropriate optical port on the CS260-10. The connector on the other end must mate with the fiber optic link under test.

Launch and Receive cables are required to measure the insertion loss and reflectance of the near-end and far-end connectors respectively, on the fiber link being tested. NOYES Fiber Rings may be used as Launch and Receive cables. Fiber Rings with a variety of lengths and connector styles are available from AFL. The table below helps in selecting the right test jumpers or cables for a test.

To do the following	Use the following accessories to connect OTDR to the fiber under test	Use the following accessories to terminate far-end of the fiber under test
<ul style="list-style-type: none">• Fault locate - find a break• Measure link length	Test Jumper (1-2 m typical)	None
<ul style="list-style-type: none">• Measure near-end connector loss• Measure near-end connector reflectance	Launch cable *	None
<ul style="list-style-type: none">• Measure both near-end connector loss and reflectance, and far-end connector loss and reflectance• Measure end to end link loss and return loss	Launch cable *	Receive cable *

* Such as NOYES 150 m Fiber Ring.

Minimum fiber ring length may be determined as follows:


- Determine the widest pulse width you expect to use for your testing application (e.g. 1 us).
- Divide the pulse width (in ns) by 10 ns/m, the approximate speed of light in glass fiber. This provides a length in meters.
- Multiply the length in meters by 3 to determine the minimum length of the launch fiber you should use.

CS260-10 Hardware Features

Front Panel (Keys and Display)


The CS260-10 front panel contains keys, indicator, and a display. The use of the [Power], [Menu], [Test], [Back], [Save], and [VFL] keys are fixed. The use of the soft function keys and arrow keys depends on which menu or editor submenu is displayed.

Function of each key is explained in the section titled 'Using CS260-10 Keys'.

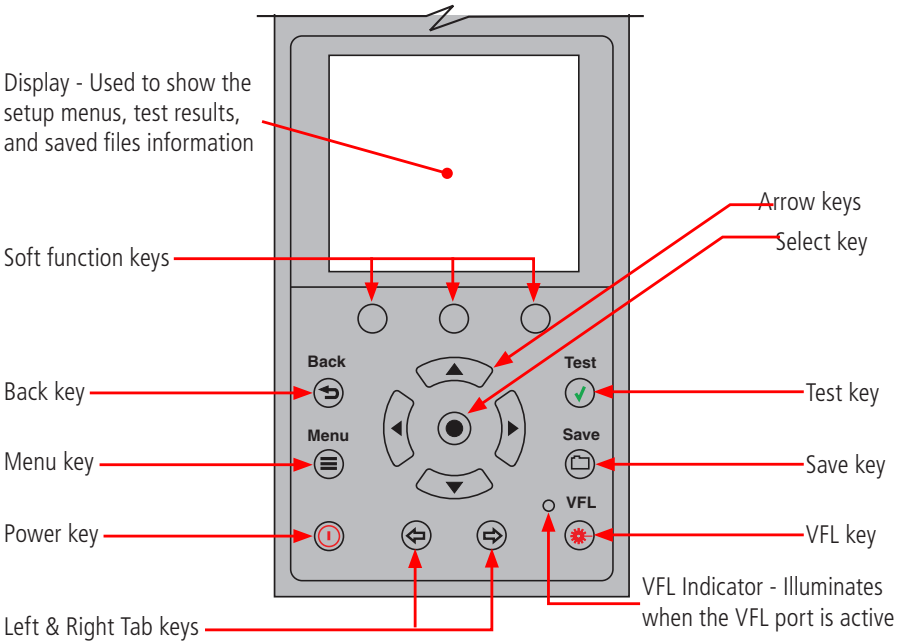

Top Panel (Test Ports)


Red colored bar indicates the VFL test port

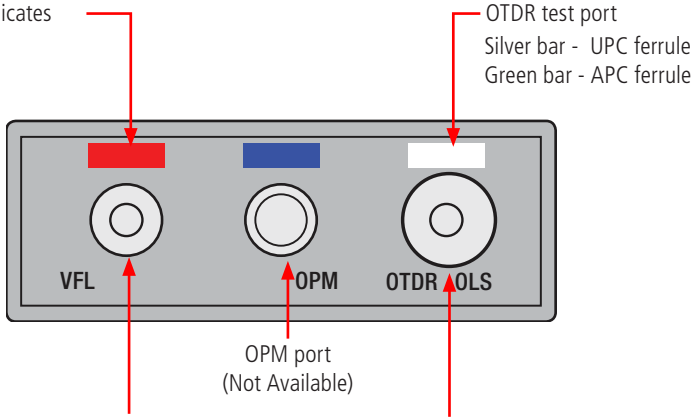

VFL port - This is a CLASS II LASER output.
Do not stare into beam!
The visual fault locator (VFL) port is a 650 nm (red) laser.

OTDR port
This is a CLASS I LASER output and input for FTTx PON meter.

Side Panel (USB and Power Ports)

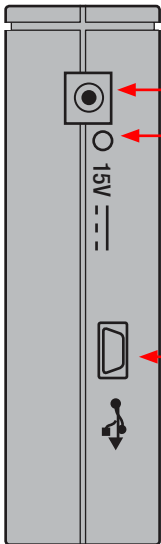

Power port - This is the interface for the AC power adapter/charger.











AC/Charger indicator - When ON, indicates that an AC adapter is connected to the CS260-10.

- Red light - rechargeable battery is charging.
- Green light - rechargeable battery is fully charged.

USB function port - Allows connection to a PC for transferring stored test results.




Front Panel Keys

The use of each key is summarized in the table below.


Key Symbol	Key Name	Key Function
	Power	Press and hold (~1 second) to turn the CS260-10 on or off.
	VFL laser	Visual Fault Locator (red laser) ON - Press and hold (~1 second) LED will flash ON - Press and hold (~1 second) LED will be solid OFF - Press and hold (~1 second) LED should be OFF
	Menu	Press to access the Main Menu.
	Left and Right Tab keys	Press to display the next/previous available Menu Tab or Test View Tab.
	Arrow (Navigation) keys	The arrow keys provide several functions: <ul style="list-style-type: none"> • Main Menu: these keys are used to navigate menus and change setup parameters. • Trace Page: in the Zoom mode these keys are used to adjust zoom. In the Move mode, Left and Right keys are used to move cursors.
	Select (A/B)	This key provides several functions: <ul style="list-style-type: none"> • Main Menu: press this key to display a submenu (if available). • Trace Page: press this key to toggle the active cursor between A and B
	Back	Press once to return the previous page. Press one or more times, depending on which menu or editor submenu is displayed, to return to the Main Menu.
	Test	Press to start or stop a test.
	Save	This key provides several functions: <ul style="list-style-type: none"> • Save the currently displayed test results • Set current folder • Set current file name • Review results
	Soft function keys (under display)	The label shown in the display above each soft key (F1, F2 or F3) indicates the current function for that key. Press to select the indicated function.

CS260-10 Setup

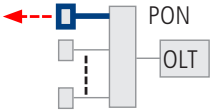OTDR Modes


Test Mode	Network	Applications	Setup
FTTx – In Service		PON power meter Customer fiber fault location (fiber may be live or dark). Test live fibers through splitter.	Auto or Semi-Auto
FTTx – PON Construction		End-to-end loss Splitter loss Feeder fiber fault location	Semi-Auto
Full Auto	Metro Access 	Fault location End-to-end loss Connection loss & reflection Splice loss	Auto
Real Time	Any	Short range fault location First connector check Fusion splice check Mechanical splice tuning	Semi-Auto
Expert	Metro Access or PON	For experienced users	Manual or Semi-auto

Main Menu

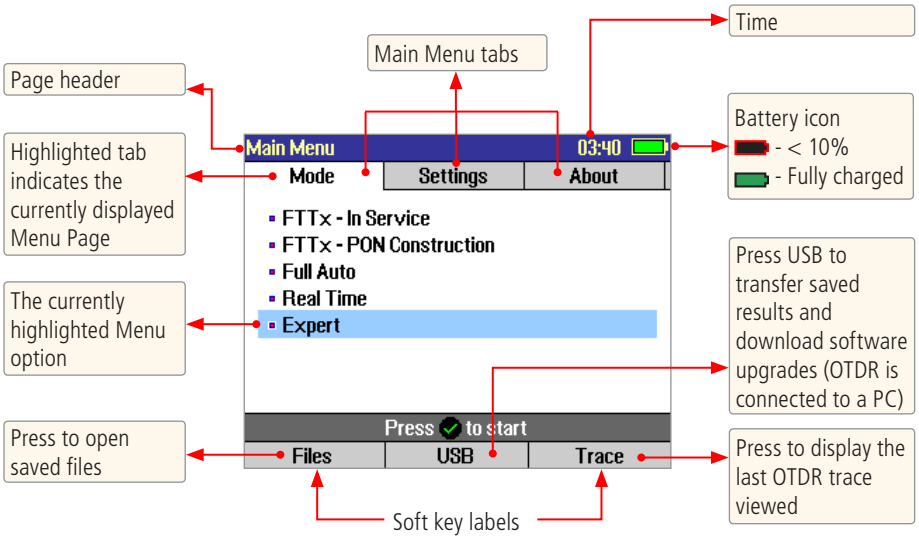

Selecting a Test Mode

1. Press the Menu key to display the Main menu. The Mode menu page **A** is displayed by default.
2. Use ▲▼ keys to highlight the desired Test Mode.
3. Press the Select - ● key to display a settings submenu for the highlighted Test Mode. From this submenu:
 Use ▲▼ keys to highlight the desired setup parameter.
 Use ◀▶ keys to set/change the highlighted parameter.

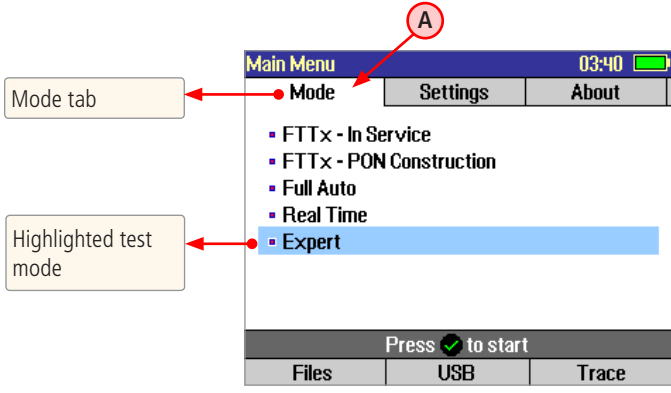

Understanding OTDR Test Parameters


Parameter	Description
Range	The [Range] parameter determines the distance range of the full (unzoomed) trace. It also determines the distance between data points in the trace: the longer the range, the wider the data point spacing. We recommend selecting the shortest distance range that is longer than the fiber under test. For example, to test a fiber that is 1.5 km long, select the 3 km range. Available [Range] values: 250 m, 500 m, 1, 1.5, 3, 6, 15, 30, 60, 120, 240 km
Pulse	The CS260-10 can operate using different pulse widths. Short pulse widths provide the shortest event and attenuation dead zones. Long pulse widths provide the range needed to test long fibers. Available [Pulse] values: 5, 10, 30, 100, 300 ns, 1, 3, 10 μ s.
Averaging	The [Averaging] parameter determines the duration of a timed test and the number of trace averages performed. The longer the test the smoother the trace. Available [Averaging] values: 5, 10, 15, 30, 60, 90, 180 sec.
Resolution	Available: [Normal] or [High]. Set to [High] to see events that are close together; set to [Normal] for longer range.

Setting Test Parameters

Range


Range should normally be set to a value longer than the known length of the fiber under test. Shorter values may be used to obtain a higher resolution trace of the initial portion of the fiber. If you do not know the length of the fiber, start with a quick scan using a long range to determine where the fiber end is, then re-scan with a more appropriate range setting.

Note: The CS260-10 automatically determines the appropriate Range setting In Full Auto and FTTx – In Service modes.

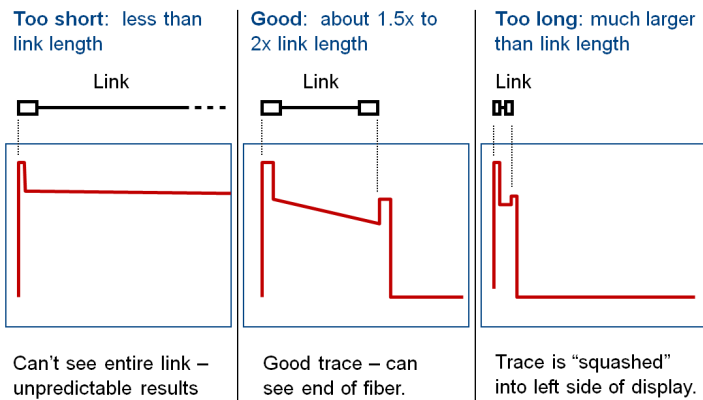


Pulse width

Narrow pulse widths provide better resolution. That is, they may be used to detect events which are close together. However, narrower pulse widths inject less optical energy into the fiber-under-test, resulting in a noisier trace (lower dynamic range). If a narrow pulse width is used on a long fiber, the trace may reach the noise floor before the end of the fiber is reached.

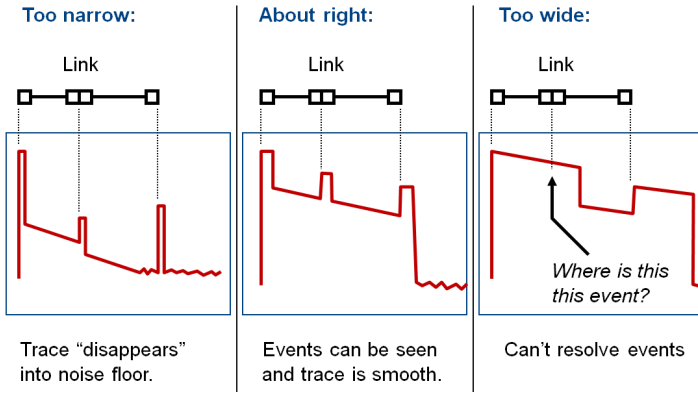

Averaging

Longer averaging times improve dynamic range and can be used to compensate for some of the range lost when selecting a narrow pulse width. However, tests take longer to complete.


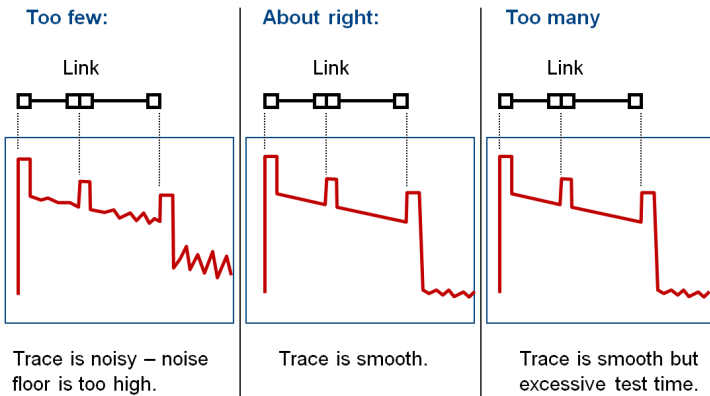


Resolution

"Normal" resolution averages a higher number of traces than "High" resolution does in a given time frame by using a more coarse data-spacing. Events in the event table may be more precisely located using High resolution.

FTTx – In Service Test Mode Settings

In the FTTx – In Service mode the first page displays received FTTx PON power at 1490 and 1550 nm. On either dark or live fibers, users can test only at 1625 nm.

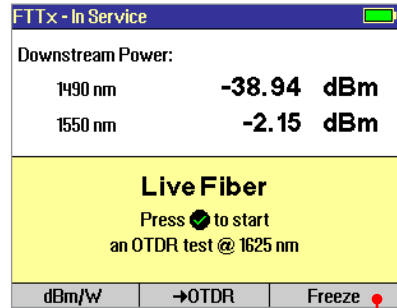
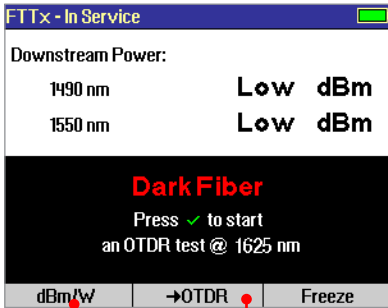


Press to toggle display of power in dBm or Watts (mW, uW, nW)

Press to display OTDR Test Settings screen

[Freeze]/[Unfreeze] holds/resumes updating power readings continuously

FTTx – In Service OTDR Test Settings screen

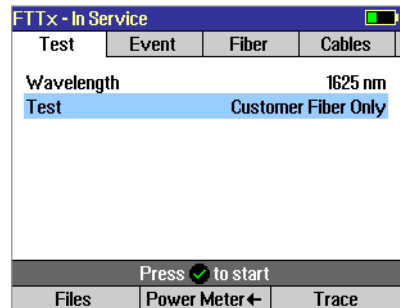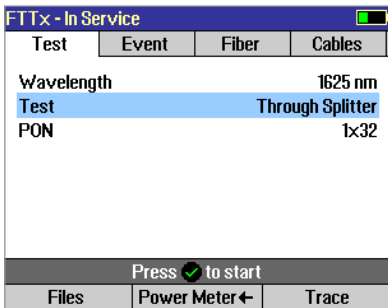

Press to display PON power meter screen

This screen is used to configure FTTx – In Service to:

- test the customer drop fiber only
- or test through the splitter

When Test [**Through Splitter**] is selected, the user must specify the PON split ratio. Available PON split ratio settings are 1x8, 1x16, 1x32, and 1x64. If cascaded splitters are used and you wish to see through both, multiply together the larger numbers of the two cascaded splitters and use this value to select the PON split ratio.

Example: Cascaded 1x4 and 1x8: Multiply 4 and 8 = 32. Select PON split ratio of 1x32.

FTTx - PON Construction Test Mode Settings

In this test mode, the user may set the [Range] and [PON] parameters. From the Mode menu, display the FTTx - PON Construction page. Use ▲▼ keys to highlight the desired test setup parameter to set. Use ◀▶ keys to set/change the highlighted parameter.

- Wavelength is fixed at 1625 nm
- Use ◀▶ keys to set the [Range] parameter to a value that is greater than the longest end-to-end distance in the PON from central office to a customer.
- Use ◀▶ keys to set the [PON] parameter to a value that corresponds to the split ratio of the PON you are testing.
Notes: Pulse width and averaging time are automatically set based on Range and PON split ratio. Wider pulse widths provide a smoother trace. Selecting a longer range or higher PON split ratio will result in a wider pulse width.

Test	Event	Fiber	Cables
Wavelength			1625 nm
Range			30 km
PON			1x64

Press [Enter] to start

Files | Trace

Full Auto Test Mode Settings

In this test mode, wavelength is fixed at 1625 nm. [Range], [Pulse], [Averaging], and [Resolution] parameters are set by the CS260.

- From the Mode menu, display the Full Auto page.
- Press Test to start a Full Auto OTDR test at 1625 nm

- Wavelength is fixed at 1625 nm

Test	Event	Fiber	Cables
Wavelength			1625 nm

Press [Enter] to start

Files | Trace

Real Time Test Mode Settings

In the Real Time test mode, the user may set the [Auto Setup] parameter to [Off] or [By Range].

- **[Off]:** Setting the [Auto Setup] parameter to [Off], allows the user to set the [Range], [Pulse], and [Resolution] parameters.
- **[By Range]:** Setting the [Auto Setup] option to [By Range], allows the user to set the [Range] and [Resolution] parameters while the [Pulse] parameter is set by CS260-10.

1. From the Mode menu, display the Real Time page.
2. Use ▲▼ keys to highlight the desired setup parameter.
3. Use ◀▶ keys to set/change the highlighted parameter.

Wavelength is fixed at 1625 nm

If set to [By Range], set [Range] and [Resolution] while the CS260-10 sets the [Pulse] parameter.

If set to [Off], set [Range], [Pulse], and [Resolution] parameters.

Test	Fiber	Cables
Wavelength		1625 nm
Auto Setup		By Range
Range		500 m
Pulse		30 ns
Resolution		Normal

Press [OK] to start

Files Trace

Expert Test Mode Settings

In the Expert test mode, the user may set the [Auto Setup] parameter to [Off] or [By Range].

- **[Off]:** Setting the [Auto Setup] parameter to [Off], allows the user to set the [Range], [Pulse], [Averaging], and [Resolution] parameters.
- **[By Range]:** Setting the [Auto Setup] option to [By Range], allows the user to set the [Range], [Averaging], and [Resolution] parameters while the [Pulse] parameter is set by the CS260-10.

1. From the Mode menu, display the Expert mode page.
2. Use ▲▼ keys to highlight the desired test setup parameter.
3. Use ◀▶ keys to set/change the highlighted parameter.

Wavelength is fixed at 1625 nm

If set [By Range], set [Range] and [Resolution] while the CS260-10 set the [Pulse] and [Averaging] parameters.

If set to [Off], set [Range], [Pulse], [Averaging], and [Resolution] parameters.

Test	Event	Fiber	Cables
Wavelength			1625 nm
Auto Setup			By Range
Range			120 km
Pulse			3 us
Averaging			60 sec
Resolution			High

Press [OK] to start

Files Trace

Event Threshold Settings


Event threshold settings may be modified in FTTx - In Service, FTTx - PON Construction, Full Auto, and Expert test modes.

Event Thresholds: FTTx – In Service mode


In the FTTx - In Service test mode the [Event] parameter is set to [Auto] by default.

1. From the FTTx - In Service test mode page, display the Event menu **A** using $\leftarrow \rightarrow$ keys .
2. Use $\blacktriangle \blacktriangledown$ keys to highlight the desired setup parameter.
3. Use $\blacktriangleleft \blacktriangleright$ keys to set/change the highlighted parameter.

This parameter may be set to:
[Default] - CS260-10 sets [Event Loss] and [Event Reflectance].
[User] - [Event Loss] and [Event Reflectance] are set by the user. Allows the user to perform FTTx PON tests using manual settings.

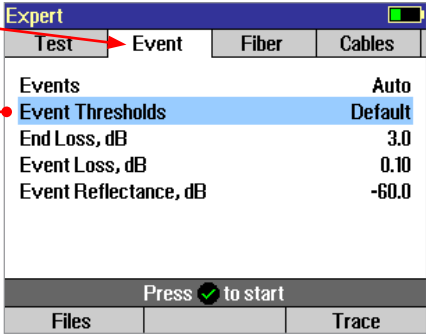

Expert			
Test	Event	Fiber	Cables
Events	Auto		
Event Thresholds	Default		
End Loss, dB	3.0		
Event Loss, dB	0.10		
Event Reflectance, dB	-60.0		

Press  to start

Files Trace

Note: Event Loss and Reflectance threshold settings are used to determine whether or not a detected anomaly should be reported as an event and included in the event table, and if so how it should be classified by event type (e.g. as a reflective or non-reflective event).


Types of events are described in section titled "Event Types".

Event Thresholds: FTTx – PON Construction mode


In FTTx – PON Construction mode, the [Events] parameter is set to [Auto] by default and may not be disabled.

1. From the FTTx - PON Construction test mode page, display the Event menu **A** using $\leftarrow \rightarrow$ keys.
2. Use $\blacktriangle \blacktriangledown$ keys to highlight the desired setup parameter.
3. Use $\blacktriangleleft \blacktriangleright$ keys to set/change the highlighted parameter.

This parameter may be set to
[PON Default] - CS260-10 sets [Event Loss] and [Event Reflectance].
[PON User] - [Event Loss] and [Event Reflectance] are set by the user. Allows the user to perform FTTx PON tests using manual settings.

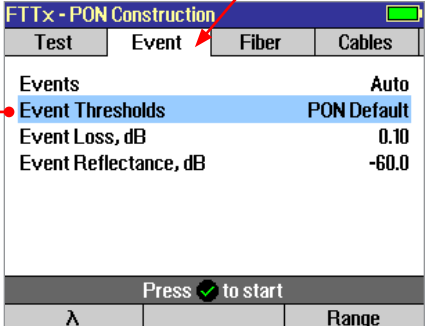

FTTx - PON Construction			
Test	Event	Fiber	Cables
Events	Auto		
Event Thresholds	PON Default		
Event Loss, dB	0.10		
Event Reflectance, dB	-60.0		

Press  to start

λ Range

Event Thresholds: Full Auto mode

In Full Auto mode, the [Events] parameter may be set to [Auto] or [Off]. When set to [Auto], automatic event detection is enabled, applying user-set End Loss, Event Loss, and Event Reflectance thresholds. Thresholds are adjusted as follows:

1. From the Full Auto test mode page, display the Event menu **A** using $\leftarrow \rightarrow$ keys.
2. Use $\blacktriangle \blacktriangledown$ keys to highlight the desired setup parameter.
3. Use $\blacktriangleleft \blacktriangleright$ keys to set/change the highlighted parameter.

This parameter may be set to [Default] - CS260-10 sets [Event Loss] and [Event Reflectance].
[User] - [Event Loss] and [Event Reflectance] are set by the user.

Automatic event analysis declares the fiber end at the first event with event loss exceeding the End Loss threshold.

A detected event is reported in the event table (see section titled 'Event Types') if either:
the measured event loss exceeds the Event Loss threshold, or
the measured event reflectance exceeds the Event Reflectance threshold.

Full Auto	
Test	Event
Events	Auto
Event Thresholds	Default
End Loss, dB	3.0
Event Loss, dB	0.10
Event Reflectance, dB	-60.0
Press \rightarrow to start	
λ	Range

Event Thresholds: Expert mode

In Expert mode, the [Events] parameter may be set to [Auto] or [Off]. When set to [Auto], automatic event detection is enabled, applying user-set End Loss, Event Loss, and Event Reflectance thresholds. Thresholds are adjusted as follows:

From the Expert test mode page, display the Event menu **A** using $\leftarrow \rightarrow$ keys.

1. Use $\blacktriangle \blacktriangledown$ keys to highlight the desired setup parameter.
2. Use $\blacktriangleleft \blacktriangleright$ keys to set/change the highlighted parameter.

This parameter may be set to [Default] - CS260-10 sets [Event Loss] and [Event Reflectance].
[User] - [Event Loss] and [Event Reflectance] are set by the user.
[PON Default] - CS260-10 sets [Event Loss] and [Event Reflectance]. Allows the user to perform FTTx PON tests using default settings.
[PON User] - [Event Loss] and [Event Reflectance] are set by the user. Allows the user to perform FTTx PON tests using manual settings.

Expert	
Test	Event
Events	Auto
Event Thresholds	Default
End Loss, dB	3.0
Event Loss, dB	0.10
Event Reflectance, dB	-60.0
Press \rightarrow to start	
λ	Range

Fiber Menu Settings

The Fiber menu page allows selecting the Fiber Type between default - [SMF-28e] and [User]


- [SMF-28e] - sets the default Index (Group Index of Refraction) and BC (Backscatter Coefficient) values to those of SMF-28e type fiber
- [User] - allows entering user selectable Index (Group Index of Refraction) and BC (Backscatter Coefficient) values

Notes:

- Using the default Index and BC values is generally recommended.
- Enter the [User] Index and BC values only if you know the specifications of the particular fiber you are testing and these specifications are significantly different from the default SMF-28e numbers.

To Set Fiber Parameters

1. From the current OTDR test mode menu, use $\leftarrow \rightarrow$ keys to display the Fiber menu page **A**.
2. Use $\blacktriangle \blacktriangledown$ keys to highlight the desired parameter to set.
3. Use $\blacktriangleleft \blacktriangleright$ keys to change the highlighted parameter.

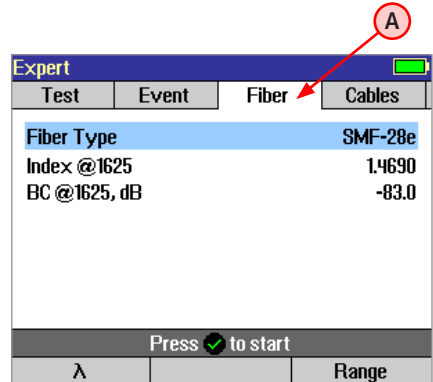

Cables Menu Settings

Note: Launch and Receive cables are required to measure the insertion loss and reflectance of the near-end and far-end connectors respectively, on the fiber link being tested. See section titled "Recommended Accessories" for details and recommended launch and receive cable lengths.

Launch Cable (Launch Cord) - A test cable used to connect an OTDR to the near end of the link under test. To accurately measure the loss of the first connection to the fiber-under-test, determine the widest pulse width you expect to use (in ns), divide this by 10 ns/m to convert pulse width to its equivalent fiber length, then multiply by 3 to determine the minimum recommended launch fiber length.

Receive Cable (Tail Cord) - A test cable used to terminate the far end of the link under test. To accurately measure the loss of the last connection, use a receive cable at least as long as the recommended launch cable length.

To set Launch/Receive Cable parameter:

1. From the current OTDR test mode menu, use $\leftarrow \rightarrow$ keys to display the Cables menu page **(A)**.
2. Use $\blacktriangle \blacktriangledown$ keys to highlight the desired setup parameter.
3. Use $\blacktriangleleft \blacktriangleright$ keys to set/change the highlighted parameter.

This parameter may be set to None
 Default 1: 150 m fiber ring
 Default 2: 500 m fiber ring
 Default 3: 1000 m fiber ring
 Default 4: 2000 m fiber ring
 User: Adjust Launch / Receive Length parameter to match the length of the user-provided launch and/or receive cable(s)

Test	Event	Fiber	Cables
			User
			Launch Cable
			Launch Length 100.0 m
			Receive Cable
			Receive Length 150.0 m

Press to start

λ		Range
---	--	-------

General Settings

The General Settings page contains [Language], [Date & Time], and [Distance] settings.

- [Language] - allows selecting a language from a list of available languages
- [Date & Time] - provides time & date setup functions
- [Distance Units] - distance units of measurement setting impact how new and saved traces are displayed. Changes made to distance units will impact currently viewed results and future tests.

1. From the Main menu, display the Settings page **(A)** using $\leftarrow \rightarrow$ keys.
2. Using use $\blacktriangle \blacktriangledown$ keys navigate up/down the list to highlight the desired setup parameter.

Press to display submenu
 Use $\blacktriangle \blacktriangledown$ to highlight the desired language
 Press Set or when done

Press to display submenu
 Use $\blacktriangle \blacktriangledown$ to highlight the desired setup parameter
 Use $\blacktriangleleft \blacktriangleright$ keys to set/change date/time
 Press Set when done

Use $\blacktriangleleft \blacktriangleright$ keys to change units

Main Menu			20:31
Mode	Settings	About	
	Language...		
	Date & Time...		
	Distance Units		Kilometers

Press to start

Files	USB	Trace
-------	-----	-------

Trace Page Features

The illustration below and table on the next page describe the Trace Page features (example trace below includes a launch and receive cable).

Trace Page displays OTDR trace, A/B cursors, Loss, Distance, and max reflectance between A and B cursors

Event Table displays OTDR event measurements

File name (cable name + fiber number), or "New Trace" if file has not been saved

Summary Page displays end-to-end link measurements

Test Wavelengths (RED is current)

Information Page displays OTDR setup parameters, launch and receive cable data, and event thresholds

Grid units display dB/div on vertical axis and distance/div on horizontal axis

C001-001

1625

13.1 dB, 510 m /div

A	-0.0434	B	1.6698	A→B	1.7132	km
Reflectance			-51.403	Loss	1.044	dB

Zoom Rezoom

C001-002

1625

6.5 dB, 510 m /div

A	0.0006	B	1.5223	A→B	1.5217	km
Reflectance			-52.584	Loss	1.496	dB

Zoom Unzoom

Soft key labels

C001-002

1625

6.5 dB, 510 m /div

A	0.0006	B	1.5223	A→B	1.5217	km
Reflectance			-52.584	Loss	1.496	dB

Zoom Unzoom

Press to toggle Zoom and Move mode. In Move mode, the key label will be displayed as [Zoom]. In Zoom mode, the key label will be displayed as [Zoom]

Fiber under test

Launch cable
Note: this region is only present if the network was defined (in the Cables page) to include a Launch cable. The width of the shaded region is based on the length of the launch cable specified in the Cables page.

Receive cable
Note: this region is only present if the network was defined (in the Cables page) to include a Receive cable. The width of the shaded receive region is based on the length of the receive cable specified in the Cables page.

A and B cursors

Trace graph (RED is current)

B cursor location (active cursor is highlighted)

A cursor location

Distance between A and B cursor


2-point Loss between A and B cursor

Press to Unzoom or Rezoom

Event Table Page Features

Event Table is always generated if testing in the FTTx - In Service or FTTx - PON Construction test mode and optionally generated if testing in the Full Auto or Expert test mode.

1. In the FTTx - In Service and FTTx - PON Construction modes, [Events] are set to [Auto] by default.
2. In the Full Auto and Expert modes, set Events to [Auto].

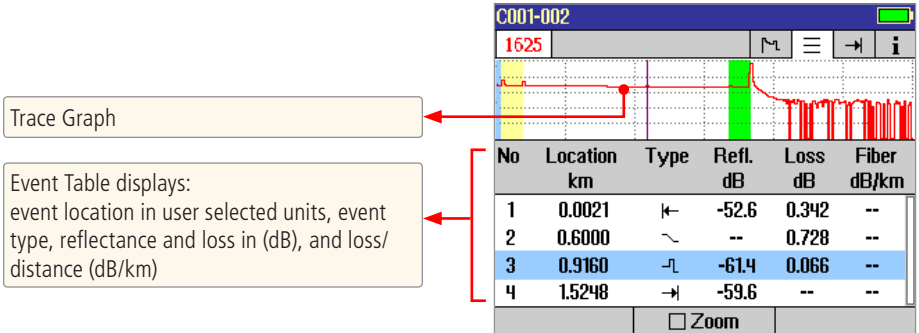


Event Types

Icon	Event Type	Description
←	Start	The start of the fiber under test.
→	End	The end of the fiber under test.
↵	Reflective Event	An event with measurable loss and reflectance, typically caused by a connection or mechanical splice.
↳	Non-Reflective Event	An event with measurable loss but very small or unmeasurable reflectance, typically caused by a fusion splice, PON splitter, or sharp bend in the fiber.
↳	Gainer	An event with 'negative loss,' which can occur in OTDR traces where two fibers with very different backscatter coefficients are spliced or connected. Normally a gainer will be seen as a normal (positive loss) event when tested from the other end of the fiber. The true loss of the event causing the gainer is approximately equal to the average of its loss measured from each end of the fiber under test.
	Multiple Event	An event table entry that accounts for two or more physical (real) events that are too close together to be measured separately by the OTDR, for example the start and end of a short jumper. The loss of a multiple event is the sum of the losses of the physical events that comprise it.

Summary Page Features

Summary page displays:
 trace graph, fiber under test [Length] in user
 selected units, [Loss] and [ORL] in (dB)

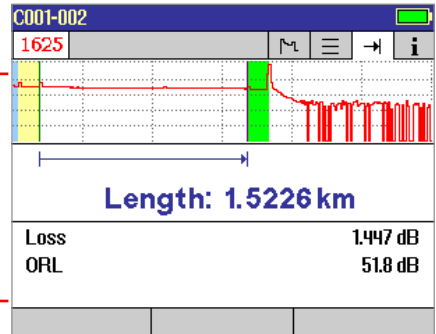



Information Page Features

The information page displays how the test was created.

- From the test viewer, use $\leftarrow \rightarrow$ keys to display Information page (A).
- Use $\blacktriangle \blacktriangledown$ keys to highlight the desired setup parameter.
- Use $\blacktriangleleft \blacktriangleright$ keys to change the highlighted setup parameter (except [Event Thresholds...]) parameter. You may change these parameters to correct locations in the Event Table after the test is complete
- When done, press [Recalc Events] to recalculate the Event Table.

- Press \odot key to display submenu (B)
- Use $\blacktriangle \blacktriangledown$ keys to highlight the desired parameter
- Use $\blacktriangleleft \blacktriangleright$ keys to change the highlighted parameter
- When done, press [Recalc Events] to recalculate the Event Table

These fields show the current test data

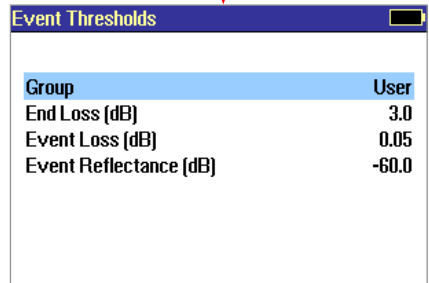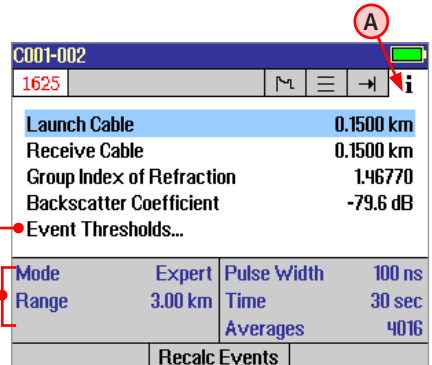



Running OTDR Tests and Viewing Results

To Start a Test

- Press the  - Test key.


Note: After an OTDR test is started, it may take several seconds for the first results to appear and depending on setup, tens of seconds or even several minutes for tests to complete.


To Stop a Test

- Press the  - Test key. If pressed after a trace appears, it will stop the test, generate the event table (see Section titled Event Types) and show the partially completed trace.
- Press the  Back key. The CS260-10 stops the test and displays the setup menu.




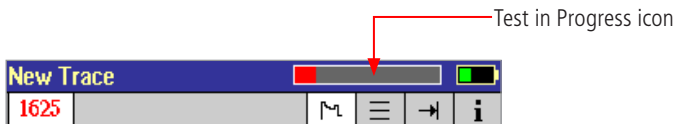


How can I tell if a test is running?

The CS260-10 Page header will display the Test in Progress icon.



To display the desired Page for viewing, use Left and Right Tab keys 

Test Viewer Pages Description

Icon	Name	Description
	Trace	Displays OTDR trace, A/B cursors, Loss and Distance between A and B cursors, and max reflectance between A and B locations.
	Event	Displays OTDR trace and for each detected event: location (in current distance units), type, reflectance (dB), and insertion loss (dB). Press   to jump to next / previous event.
	Summary	Displays end-to-end link summary (length, loss, and ORL).
	Information	Displays test settings, test cable lengths, fiber parameters, and event thresholds.

Saving and Reviewing Test Results

File Manager System

The CS260-10 File Manager system consists of four pages as follows:


Page Name	Description
Jobs	Lists the Jobs (folders) stored in the CS260-10 internal memory. Use to open or delete the highlighted job folder.
Cables	Lists the Cables (folders) in the currently open Job folder. Use to open or delete the highlighted cable folder.
Results	Lists the OTDR trace (.SOR) files in the currently open Cable folder. Use to open (view) or delete the highlighted results file.
Save As	Lists the current job, the current cable, and the fiber number that will be used the next time a group of traces is saved. Use to save the 'new' results created by the most recent test, or the results most recently opened (recalled from memory).

To display File Manager, press the [Files] soft key on the Main Menu page or when it appears.

File Manager – Jobs Page




Depending on the prior settings, the File Manager may be displayed as [Jobs], [Cables], or [Results] page. To display [Jobs] page (top level menu page in the CS260-10 File Manager):

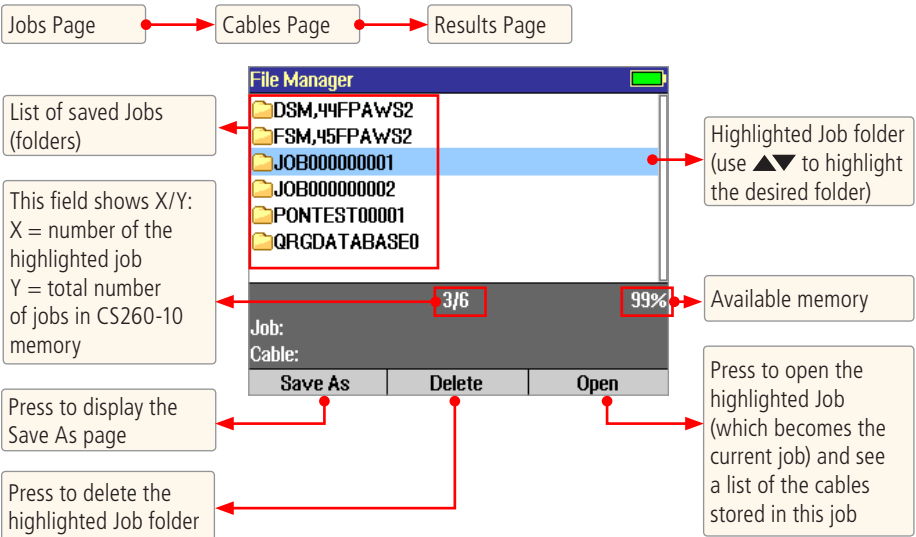
- Press the [Files] soft key.
- If the [Cables]/[Results] page is displayed, highlight the (▲ ..) symbol at the top of the [Cables]/[Results] page.
- Press the [Select] soft key - (●) to display [Jobs] page.



File Manager – Cables Page

Depending on the prior settings, the File Manager may be displayed as [Jobs], [Cables], or [Results] page. To display [Cables] page perform the following.


- Press the [Files] soft key.
- If the [Jobs] page is displayed, highlight the desired job, and then press [Select] -  to display the [Cables] page.
- If the [Results] page is displayed, highlight the ( ..) symbol at the top of the [Results] page, and then press [Select] -  to display the [Cables] page.

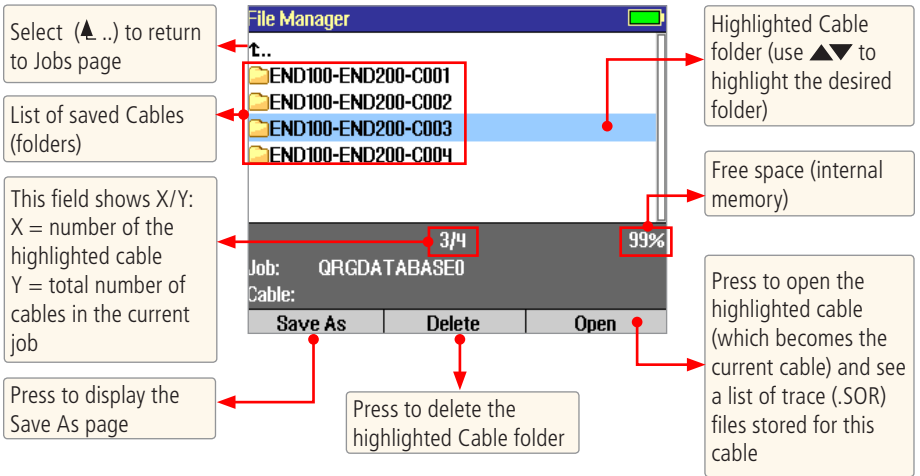

File Manager – Results Page

Depending on the prior settings, the File Manager may be displayed as [Jobs], [Cables] or [Results] page.

- Press the [Files] soft key.
- If the [Jobs] page is displayed, highlight the desired job, and then press [Select] - ● to display the [Cables] page.
- From the [Cables] page, highlight the desired cable, and then press [Select] - ● to display the results files for the selected cable.

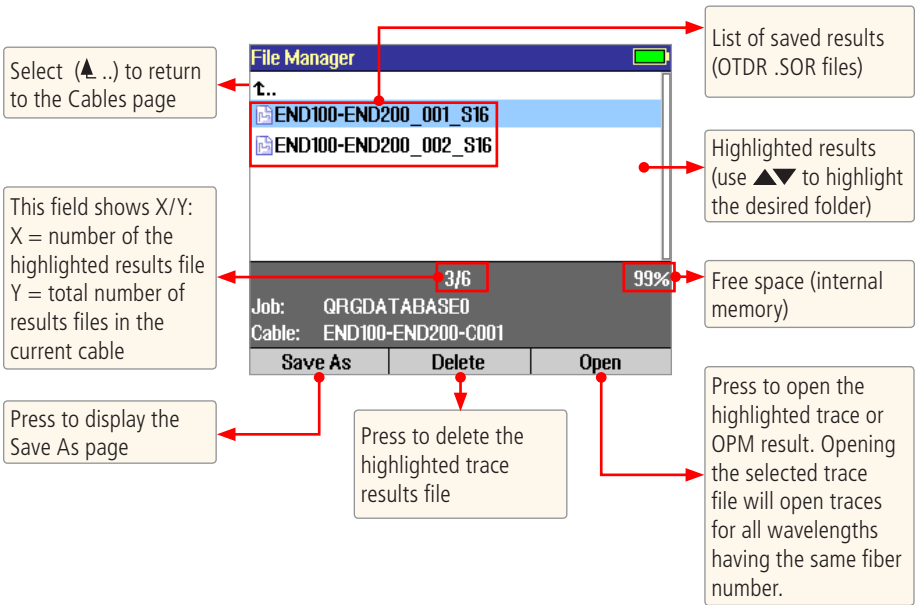


File Manager – Save As Page

The [Save As] page allows the user to save current test results and create new Jobs/Cables as needed. This page allows the user to review and change test IDs each time test results are saved.

To save test results

1. Display the [Save As] page by pressing the [Save] key or the [Save As] soft key when it appears.
2. When the [Save As] page is displayed, edit Job, End1, End2, Cable ID and Fiber number as needed:
 - Use ◀▶ keys to highlight any character position within the Job/End1/End2/Cable name fields and Fiber number field.
 - Use ▲▼ keys to change the highlighted character.
 - Use ⇐⇒ keys to select the previous or next field.
3. If the Folder name is edited to a name that already exists, then pressing the [Save] (soft or hard) key will save the current test results in this folder and make this folder current.
4. If the Job/End1/End2/Cable name and Fiber number are edited to the name and number that already exist in the current folder, then pressing the [Save] key will cause the CS260-10 to display "Overwrite file?".
5. If the Job/End1/End2/Cable name is edited to a new name, then pressing the [Save] key will cause the CS260-10 to create a new folder of this name.
6. When done, press the [Save] soft key.

Note: This is the only way to create new folders!

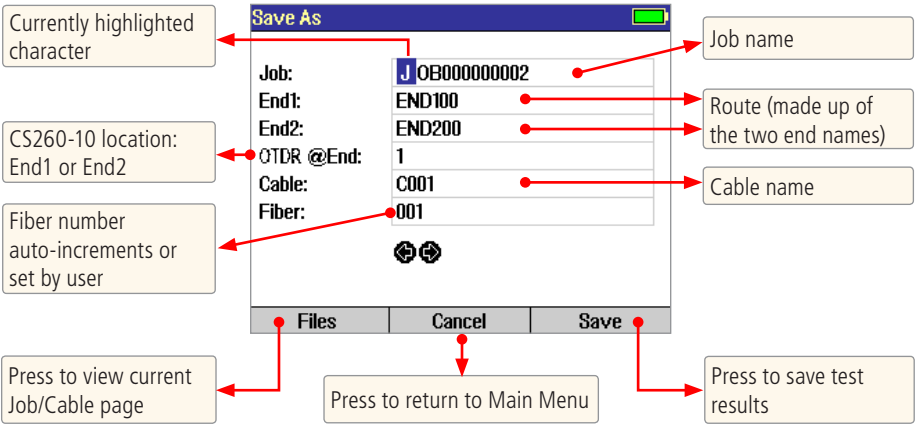

Creating New Cables (folders) Using the Save As Page

New Folders are created in the File Manager - [Save As] page.
See section above 'File Manager - Save As Page'.

Selecting a Cable as the Current Cable (folder)

1. Access the File Manager - [Cables] page.
2. Use ▲▼ keys to highlight the desired cable.
3. Press either [Select] key or [Open] soft key to make the highlighted cable current.

Saving Test Results

Test results are stored on the CS260-10 Internal Drive. Saved test results can be viewed, printed and analyzed on a PC using TRM® (Test Results Manager) software supplied with the CS260-10.

- OTDR results are saved as industry standard .SOR files

Save Results to an Existing Job/Cable

To save the currently displayed test results to an existing job/cable, perform the following steps:

1. Once a test is complete, press the [Save] key. The [Save As] page will be displayed.
2. From the displayed [Save As] page, press the [Save] key to save test results with the currently displayed Job/End1/End2/Cable name and Fiber number.

Saving Results to a New Job/Cable

To save test results to a new job/cable, use the File Manager - [Save As] page.

1. Once a test is complete, press the [Save] key to display the [Save As] page.
2. As needed, edit Job/End1/End2/Cable name and Fiber number as described in the section titled 'File Manager - Save As Page'.
3. When done, press either soft or hard [Save] key.

Opening Files (Reviewing Saved Results)

1. Access the File Manager - [Files] page by pressing the [Files - F1] soft key.
2. Use ▲▼ keys to highlight the desired file.
 - OTDR results are labeled with "OTDR" icon
3. Press the [Open - F3] soft key to display test results.

Deleting Jobs/Cables/Results

1. Access the File Manager.
2. Use ▲▼ keys to highlight the desired job/cable/results file.
3. Press the [Delete] soft key to delete the highlighted job/cable/results file.

Transferring Files to a PC via USB

To transfer files from your CS260-10 to a PC using a USB cable, perform the following:

1. Connect your CS260-10 to a PC using the supplied mini-USB to USB cable. Make sure the mini-plug is fully seated in your CS260-10.
2. Press the USB soft key on the CS260-10's main menu.
3. On your PC, open My Computer. A new removable drive named [CS X:] will appear, where 'X:' is the drive letter assigned to your CS260-10.
4. Under [CS X:] you should see two folders: [RESULTS] and [SOFTWARE].
5. Copy the [RESULTS] folder to your PC.
6. Under [RESULTS] you will see: [TRACES]
7. Under [TRACES] you will see all of the folders containing OTDR traces or OPM results.


Note:

Before removing the USB cable connecting your CS260-10 to your PC, or pressing the [Cancel] soft key on the USB page, left click the Safely Remove Hardware icon in the Start bar of your PC, then left click the [Safely remove USB Mass Storage Device – Drive (X:)] message, where 'X' is the drive letter assigned to your CS260-10.

Maintenance Tips

Dust Caps

To open dust cap

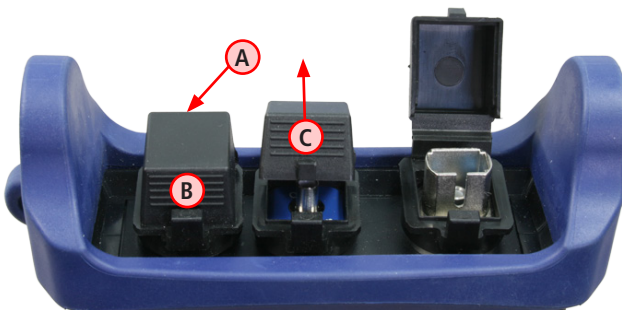

- Place your middle finger on the back side of the dust cap you need to open - **A**.
- Place your thumb in the middle section of the dust cap front - **B**.
- Press your thumb in upward direction to open the dust cap - **C**.

Caution: do not twist the dust cover trying to open it: this will make an adapter to come loose. Verify that connector adapter is tight.

Clean Test Cables and Fiber-under-Test (FUT)

It is important to keep connector end-faces on the launch and receive cables and those on the Fiber Under Test (FUT) clean, to ensure accurate measurements and operation.

IMPORTANT! Inspect optical connectors after cleaning to ensure cleaning was successful and to verify the end-face is not damaged (cracked, pitted, etc.).

CAUTION! Never view a live fiber. Laser radiation is harmful to eyes.

Follow your company's approved cleaning procedures.

Clean Optical Ports

CAUTION! Before conducting the following procedures be sure to have the OTDR turned OFF.

Cleaning the OTDR and VFL optical ports without removing adapters

AFL One-Click Cleaner method

- Remove the protective dust cover from the tip of the One-Click Cleaner.
- Insert the tip of the One-Click Cleaner into the optical port adapter and gently press the body of the One-Click Cleaner until an audible "click" is heard.
- Remove the One-Click Cleaner.

AFL FCC2 fluid and CCT stick method

- Lean a can of FCC2 back (30°), press the button on FCC2 to fill the well.
- Dip a CCT stick into the well of the FCC2 to dampen the tip with optical cleaning fluid.
- Place the damp tip over the ferrule to be cleaned.
- Rotate the tip clockwise 10 revolutions while applying varying pressure to create a gentle pumping action where the tip contacts the ferrule.
- Discard the CCT stick after using both tips.

Cleaning the optical ports with adapters removed

To access the OTDR Port

- Rotate the adapter base counterclockwise approximately four times.
- Pull the adapter directly out away from the universal adapter mount to expose the ferrule.

To access the VFL Port

- Unscrew the adapter counterclockwise and pull the adapter straight out to expose the ferrule.

Cleaning the Exposed Ferrule

Use lint-free optical cleaning wipes such as AFL FiberWipes and optical quality cleaning fluid such as AFL FCC2 connector cleaning fluid.

Note: if using isopropyl alcohol (IPA), be sure to use 99% pure IPA that has not been contaminated.

- Dampen a portion of the wipe with the cleaning fluid.
- Gently wipe the exposed ferrule starting with the wet section of the wipe and pulling it to the dry section.

Note: Starting with the wet cleaning and finishing in the dry improves cleaning action, reduces static buildup, and finishes with the end-face dry.

Cleaning the adapters

Method 1:

1. Insert a Cletop adapter cleaning stick into the sleeve of the adapter and rotate 10 times.
2. Remove.
3. After cleaning the adapter, replace the adapter over the ferrule; centering it onto the alignment pin.
4. Tighten the adapter base.

Method 2:

1. Use a can of filtered compressed air (held vertically), blow out any contaminants from the adapter.
2. After cleaning the adapter, replace the adapter over the ferrule; centering it onto the alignment pin.
3. Tighten the adapter base.

Recharging Batteries

You may charge the batteries while the CS260-10 is switched on or off by attaching an AC power adapter.

- Plug the AC adapter/charger into a standard wall outlet.
- Connect the AC adapter/charger to the Power port located on the CS260-10 side panel.
- The [AC/Charger] indicator on the side panel will turn on - Red.
- Charge batteries until the [AC/Charger] indicator turns Green.

Repair and Calibration

Prepaid Calibration Plans

AFL recommends annual calibrations on NOYES Test and Inspection products. ISO certification also requires calibrations. Annual calibrations performed at NOYES calibration facilities ensure that you are getting the most out of your test equipment and that your equipment is operating at NOYES specifications.

Cal Plans

Cal plans save you money by offering two annual calibrations at a discounted price. In addition to the annual calibrations, Cal plans offer a convenient calibration expiration email service that notifies you when your equipment is due for calibration. Express calibration services get your equipment back to you quickly to minimize downtime. Prepaid Cal plans include access to the NOYES product knowledge base, which gives you access to white papers and answers to frequently asked questions. Get additional savings with access to preferred customer promotions on NOYES products.

Cal Plus Plans

Cal Plus plans offer the same services as the Cal plans with the addition of a two year extended warranty. If your test equipment is found defective NOYES will repair or replace your test equipment at no additional charge. All repairs are done with genuine NOYES specified parts by a trained NOYES repair technician. Save money with free return shipping from the repair facility back to you on all extended warranty repairs. Also, save money with free replacement of worn accessories (limited to adapter caps, power cords and batteries).

Please contact customer service for a return authorization number prior to sending your NOYES test equipment in for repair or calibration.

USA Repair and Calibration services

Please contact NOYES customer service for a return authorization number prior to sending your NOYES test equipment in for repair or calibration.

AFL, NOYES Test and Inspection Division
16 Eastgate Park Road
Belmont, NH 03220
603-528-7780 or 800-321-5298

Europe Repair and Calibration services

Fujikura Europe Ltd. is an Authorized European Repair and Calibration facility for NOYES Test and Inspection products from AFL and should be contacted directly for service.

Fujikura Europe Ltd.
C51 Barwell Business Park
Leatherhead Road
Chessington, Surrey, KT9 2NY
+44 (0) 208 240 2020

How to View Version Information

From the Main Menu, use [← →] keys to open the [About...] menu and display the CS260-10 software version number.

Note: It is helpful to have the CS260-10 version number if you need to contact NOYES Customer Service or Technical Support.

Warranty

Warranty Terms and Conditions

All NOYES Test and Inspection products are warranted against defective material and workmanship for a period of (1) one year from the date of delivery to the end user. Extended Warranty starts at the end of the standard (1) one year warranty period. Any product that is found defective within the warranty period, will (at the discretion of NOYES) be repaired or replaced. Warranty will be voided if the product has been repaired or altered by other than an authorized NOYES repair facility or which have been subject to misuse, negligence, or accident. In no case shall NOYES liabilities exceed the original purchase price.

Standards Compliance Information

The CS260-10 has been designed and tested to comply with the relevant sections of any applicable specifications including full compliance with all essential requirements of the applicable EU Directives.

Returning Equipment

To return equipment, please contact NOYES to obtain additional information and a Service Request (S.R.) number. To allow us to serve you more efficiently, please include a brief description specifying the reasons for the return of the equipment.

AFL, NOYES Test and Inspection Division
16 Eastgate Park Road
Belmont, NH 03220
800-321-5298 or 603-528-7780

Thank you for choosing NOYES Test and Inspection

